

## CLEAR FILM FACE MOUNTED MOSAIC INSTRUCTIONS

- Please avoid storing loose sheets or boxes in direct sunlight or excessively hot areas.
- Allow 24 hours for the adhesive to cure before removing the mounting film. However, it is important to avoid a lengthy delay before removing the film, especially when the installation is under constant direct sunlight or excessively high temperature.
- To remove the film, begin by pulling gently from one corner in a diagonal direction at a low angle, ensuring a slow and steady motion. Straight pulling or sudden jerks may damage the film or leave behind glue residue.
- Extra care must be taken in removing the film from matt surfaces due to the stronger adhesion on this surface.
- The film is designed to be removed easily and cleanly. In the event of some adhesive residue, rub the area with a soft cloth impregnated with a mild solvent; this will clean the surface effortlessly. In the worst case scenario that some residue remains, use a paint stripper to remove the more stubborn spots.
- For additional information please refer to our package insert 'How to install clear film face mounted mosaic'.



# HOW TO INSTALL CLEAR FILM FACE MOUNTED MOSAICS



**STEP 1**  
Firmly apply the adhesive onto a perfectly flat substrate, if necessary the surface should be rendered first.



**STEP 2**  
Using a small V-Notch trowel fully apply additional adhesive.



**STEP 3**  
Flatten notches to achieve a smooth and even surface of approximately 8 mm thickness.



**STEP 4**  
Butter the sheet rear in full with a flat trowel. Apply sheets onto the setting bed (clear film side towards you).



**STEP 5**  
To achieve an even surface, press lightly using a flat trowel, or a flat board.



**STEP 6**  
Apply additional sheets taking care in aligning grout joints and maintaining a constant pattern.



**STEP 7**  
To maintain an even surface, flatten sheets at joints using a flat trowel or flat board.



**STEP 8**  
Once sheets are fully placed on the setting bed, adjust where visually required.



**STEP 9**  
Allow for a minimum of 24 hrs setting period prior peeling off the plastic mesh from the mosaics sheets.

Same installation procedure must be used for the following products


## GLASS CULTURAL BRICK



## GLASS AIRSTRIP



## DURAGLASS AIRSTRIP

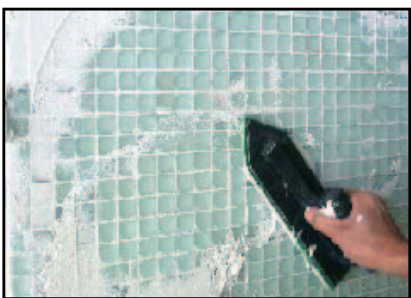

**STEP 10**  
Use a rubber float to fully apply grout into the mosaic joints.



**STEP 11**  
Allow for the grout to set (turn dull) and clean up with a damp sponge.



**STEP 12**  
After 24 hrs, use a clean dry cloth or other cleaning solution to remove the excess grout haze.